



Operating instructions

Soap dispenser

To refill soap dispensers WP 101–103 and WP 208, a key is used to unlock the housing lid. The lid folds down on hinges. Remove the empty soap container by turning it.

Take the new or refilled soap container with new screw cap and place it on the pump spike with the label facing to the front. Screw the bottle in with a counter-clockwise movement, which will press in the plastic plug. The soap will flow into the storage reservoir. Line up the bottle with the rear wall of the dispenser.

Fold up the housing lid and lock it. All tabletop soap dispensers can be refilled from above.

Paper towel dispenser

Unlock housing lid with key. Lid folds down on hinges. Place paper towels into the guide with the fold facing downwards.

Make sure the towels are layered neatly. Fold up the housing lid and lock it.


Care instructions for bathroom units made from stainless steel

Basic cleaning


To prevent scratching, the stainless steel surfaces are covered with a protective film, which needs to be removed following assembly. If, despite precautions, adhesive residue is left on the stainless steel surface, it can be removed with a conventional, pH-neutral detergent. Once the adhesive residue has been removed, rub the surfaces lightly and evenly with a non-acidic cleaning agent in the direction in which the surface was ground; this will produce a light protective coating.

Assembly instructions WP 170

Example 1

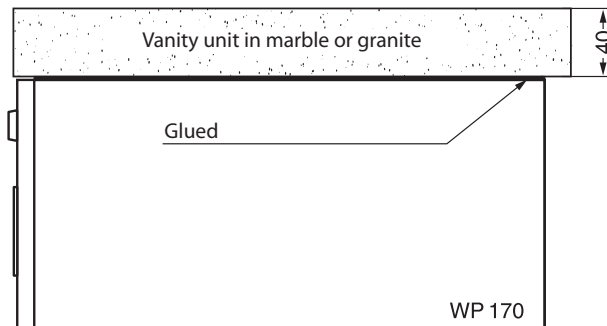

Example 2

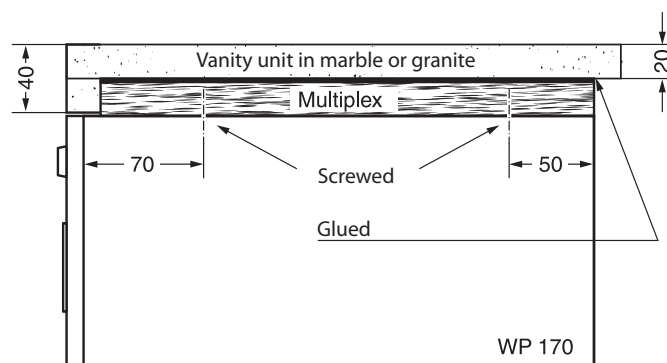

Example 3

